

### ISOLATED DC-DC CONVERTER CQB60W-110S SERIES APPLICATION NOTE



### Approved By:

Department	Approved By	Checked By	Written By
Research and Development Department	Enoch	Hugo	Lisa
Design Quality Department			



### Contents

1. Introduction	
2. Pin Function Description	3
3. Connection for Standard Use	4
4. Test Set-Up	4
5. Recommend Layout, PCB Footprint and Soldering Information	
6. Features and Functions	5
6.1 UVLO (Under Voltage Lock Out)	5
6.2 Over Current / Short Circuit Protection	6
6.3 Output Over Voltage Protection	6
6.4 Over Temperature Protection	6
6.5 Remote On/Off	6
6.6 Output Remote Sensing	7
6.7 Output Voltage Adjustment	8
7. Input / Output Considerations	9
7.1 Input Capacitance at the Power Module	9
7.2 Hold Up Time	9
7.3 Output Ripple and Noise	10
7.4 Output Capacitance	10
8. Series and Parallel Operation	10
8.1 Series Operation	10
8.2 Parallel Operation	11
8.3 Redundant Operation	11
9. Thermal Design	12
9.1 Operating Temperature Range	12
9.2 Convection Requirements for Cooling	12
9.3 Thermal Considerations	12
9.4 Power Derating	12
9.5 Quarter Brick Heat Sinks	14
10. Safety & EMC	14
10.1 Input Fusing and Safety Considerations	14
10.2 EMC Considerations	14
10.3 Suggested Configuration for RIA12 Surge Test	18



#### 1. Introduction

The CQB60W-110S series of DC-DC converters offers 60 watts of output power @ single output voltages of 5, 12, 15, 24, 28, 48VDC with industry standard quarter-brick. It has a wide (4:1) input voltage range of 43 to 160VDC (72VDC nominal) and 3000VDC basic isolation.


Compliant with EN 50155, EN 45545, EN 50121-3-2. High efficiency up to 92%, allowing case operating temperature range of -40°C to 100°C. An optional heat sink is available to extend the full power range of the unit. Very low no load power consumption (5mA), an ideal solution for energy critical systems.

The standard control functions include remote on/off (positive or negative) and +10%, -10% adjustable output voltage.

Fully protected against input UVLO (under voltage lock out), output over-current, output over-voltage and over-temperature and continuous short circuit conditions.

CQB60W-110S series is designed primarily for common railway applications of 72V, 96V, 110V nominal voltage and also suitable for distributed power architectures, telecommunications, battery operated equipment and industrial applications.

#### 2. Pin Function Description

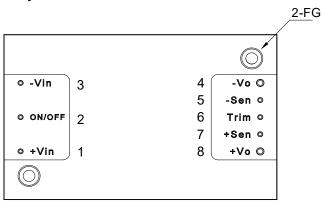


No	Label	Function	Description	Reference
1	+Vin	+V Input	Positive Supply Input	Section 7.1/7.2/ 7.3
2	ON/OFF	On/Off	External Remote On/Off Control	Section 6.5
3	-Vin	-V Input	Negative Supply Input	Section 7.1/7.2/7.3
4	-Vo	-V Output	Negative Power Output	Section 7.4/7.5
5	-Sen	-Sense	Negative Output Remote Sense	Section 6.6
6	Trim	Trim	External Output Voltage Adjustment	Section 6.7
7	+Sen	+Sense	Positive Output Remote Sense	Section 6.6
8	+Vo	+V Output	Positive Power Output	Section 7.4/7.5
		Mounting Insert	Mounting Insert (FG)	Section 9.5/10.2

Note: Base plate can be connected to FG through M3 threated mounting insert. Recommended torque 3Kgf-cm.



#### 3. Connection for Standard Use

he connection for standard use is shown below. An external input capacitor (C1) 68uF for all models is recommended to reduce input ripple voltage. External output capacitors (C2, C3) are recommended to reduce output ripple and noise, 10uF tantalum and 1uF ceramic capacitor for all models.

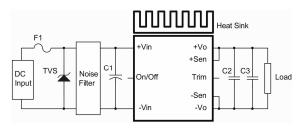

Symbol	Component	Reference
F1, TVS	Input fuse, TVS	Section 10.1
C1	External capacitor on input side	Note Section 7.2
C2, C3	External capacitor on the output side	Section 7.4/7.5
Noise Filter	External input noise filter	Section 10.2
Remote On/Off	External Remote On/Off control	Section 6.5
Trim	External output voltage adjustment	Section 6.7
Heat sink	External heat sink	Section 9.2/9.3/9.4/9.5
+Sense/-Sense		Section 6.6

#### Note:

If the impedance of input line is high, C1 capacitance must be more than above. Use more than two recommended capacitor above in parallel when ambient temperature becomes lower than -20°C.

### 4. Test Set-Up

The basic test set-up to measure parameters such as efficiency and load regulation is shown below. When testing the modules under any transient conditions please ensure that the transient response of the source is sufficient to power the equipment under test. We can calculate:

- Efficiency
- Load regulation and line regulation

The value of efficiency is defined as:

$$\eta = \frac{V_o \times I_o}{V_{in} \times I_{in}} \times 100\%$$

#### Where:

V<sub>o</sub> is output voltage, I<sub>o</sub> is output current, V<sub>in</sub> is input voltage, I<sub>in</sub> is input current

The value of load regulation is defined as:

$$Load\ reg. = \frac{V_{FL} - V_{NL}}{V_{NL}} \times 100\%$$

Where:

 $V_{\text{FL}}$  is the output voltage at full load  $V_{\text{NL}}$  is the output voltage at no load


The value of line regulation is defined as:

$$\textit{Line reg.} = \frac{\textit{V}_{\textit{HL}} - \textit{V}_{\textit{LL}}}{\textit{V}_{\textit{LL}}} \times 100\%$$

Where:

 $V_{\text{\scriptsize HL}}$  is the output voltage of maximum input voltage at full load

 $V_{\text{LL}}$  is the output voltage of minimum input voltage at full load




CQB60W-110S Series Test Setup


C1: 68uF/200V ESR<0.7Ω C2: 1uF/1206 ceramic capacitor C3: 10uF tantalum capacitor



### 5. Recommend Layout, PCB Footprint and Soldering Information

The system designer or end user must ensure that metal and other components in the vicinity of the converter meet the spacing requirements for which the system is approved. Low resistance and inductance PCB layout traces are the norm and should be used where possible. Due consideration must also be given to proper low impedance tracks between power module, input and output grounds.

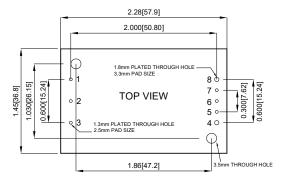


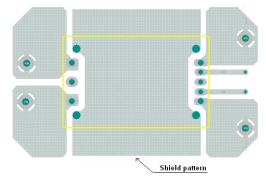

Clean the soldered side of the module with a brush, prevent liquid from getting into the module. Do not clean by soaking the module into liquid. Do not allow solvent to come in contact with product labels or resin case as this may changed the color of the resin case or cause deletion of the letters printed on the product label. After cleaning, dry the modules well.

The suggested soldering iron is  $450^{\circ}$ C for up to 5 seconds (less than 50W). Furthermore, the recommended soldering profile is shown below.


#### Lead Free Wave Soldering Profile

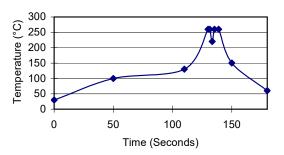

#### 6. Features and Functions

#### 6.1 UVLO (Under Voltage Lock Out)


Input under voltage lockout is standard on the CQB60W-110S series unit. The unit will shut down when the input voltage drops below a threshold, and the unit will operate when the input voltage goes above the upper threshold.

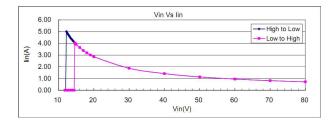



#### 6.2 Over Current / Short Circuit Protection

All models have internal over current and continuous short circuit protection. The unit operates normally once the fault condition is removed. At the point of current limit inception, the converter will go into hiccup mode protection.

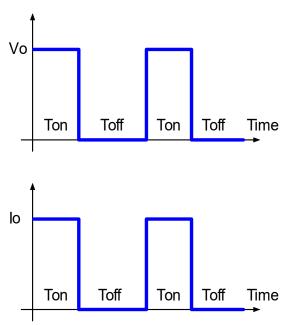

#### 6.3 Output Over Voltage Protection


The output over voltage protection consists of circuitry that internally limits the output voltage. If more accurate output over voltage protection is required, then an external circuit can be used via the remote **on/off** pin.


#### Note:

Please note that device inside the power supply might fail when voltage more than rate output voltage is applied to output pin. This could happen when the customer tests the over voltage protection of unit. OVP can be tested by using the TRIM UP function. Consult us for more information.

#### 6.4 Over Temperature Protection

These modules have an over temperature protection circuit to safeguard against thermal damage. Shutdown occurs with the maximum case reference temperature is exceeded. The module will restart when the case temperature falls below over temperature recovery threshold. Please measure case temperature of the center part of aluminum base plate.

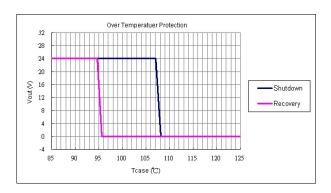

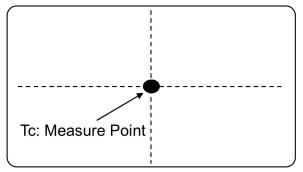

#### 6.5 Remote On/Off

The CQB60W-110S series allows the user to switch the module on and off electronically with the remote **on/off** feature. All models are available in "positive logic" and "negative logic" (optional) versions. The converter turns on if the remote **on/off** pin is high (>3.5Vdc to 75Vdc or open circuit). Setting the pin low (0 to<1.2Vdc) will turn the converter off. The signal level of the remote **on/off** input is defined with respect to ground.


If not using the remote **on/off** pin, leave the pin open (converter will be on).

Models with part number suffix "N" are the "negative logic" remote **on/off** version. The unit turns off if the remote **on/off** pin is high (>3.5Vdc to 75Vdc or open circuit). The converter turns on if the **on/off** pin input is low (0 to<1.2Vdc). Note that the converter is off by default.


Logic State (Pin 2)	Negative Logic	Positive Logic
Logic Low	Module on	Module off
Logic High	Module off	Module on



The converter remote **on/off** circuit built-in on input side. The ground pin of input side Remote On/Off circuit is -Vin pin. Inside connection sees below.

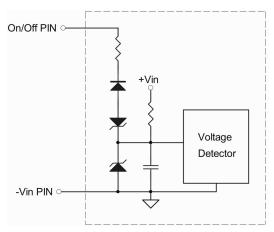

**Connection Examples See Below** 

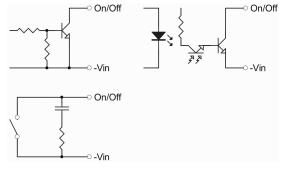


Remote On/Off Connection Example

#### 6.6 Output Remote Sensing


The CQB60W-110S series converter has the capability to remotely sense both lines of its output. This feature moves the effective output voltage regulation point from the output of the unit to the point of connection of the remote sense pins. This feature automatically adjusts the real output voltage of the CQB60W-110S series in order to compensate for voltage drops in distribution and maintain a regulated voltage at the point of load. The remote-sense voltage range is:

$$[(+V_o)$$
 -  $(-V_o)]$  –  $[(+Sen)$  –  $(-Sen)] \leq 10\%$  of  $V_o$   $_{nominal}$ 

When remote sense is in use, the sense should be connected by twisted-pair wire or shield wire. If the sensing patterns short, heave current flows and the pattern may be damaged. Output voltage might become unstable because of impedance of wiring and load condition when length of wire is exceeding 400mm. This is shown in the schematic below.

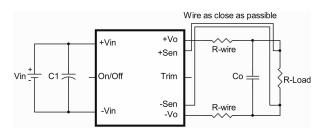

If the remote sense feature is not to be used, the sense pins should be connected locally. The +Sense pin should be connected to the +Vout pin at the module and the -Sense pin should be connected to the -Vout pin at the module. Wire between +Sense and +Vout and between -Sense and -Vout as short as possible. Loop wiring should be avoided. The converter might become unstable by noise coming from poor wiring. This is shown in the schematic below.

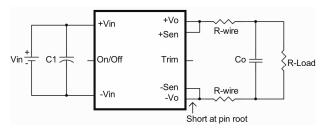


#### Note:

Although the output voltage can be varied (increased or decreased) by both remote sense and trim, the maximum variation for the output voltage is the larger of the two values not the sum of the values. The output power delivered by the module is defined as the voltage at the output terminals multiplied by the output current. Using remote sense and trim can cause the output voltage to increase and consequently increase the power output of the module if output current remains unchanged. Always ensure that the output power of the module remains at or below the maximum rated power. Also be aware that if Vo.set is below nominal value, Pout.max. will also decrease accordingly because Io.max. is an absolute limit. Thus, Pout.max. = Vo.set x Io.max. is also an absolute limit.




#### 6.7 Output Voltage Adjustment


Output may be externally trimmed (-10% to +10%) with a fixed resistor or an external trim pot as shown (optional). Model specific formulas for calculating trim resistors are available upon request as a separate document.

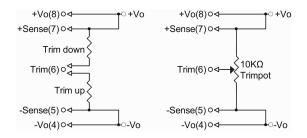

In order to trim the voltage up or down, one needs to connect the trim resistor either between the trim pin and -Sense for trim-up or between trim pin and +Sense for trim-down. The output voltage trim range is -10% to +10%. This is shown:

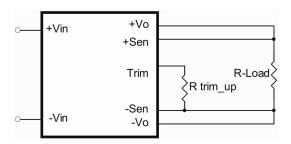

**Trim-up Voltage Setup** 

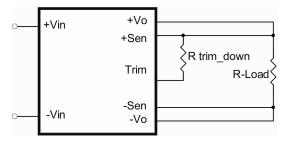

Trim-down Voltage Setup

#### The value of R<sub>trim up</sub> defined as:

$$Rtrim\_up = \left(\frac{R1(Vr - Vf(\frac{R3}{R3 + R4}))}{Vo - Vo\ nom}\right) - \frac{R3XR4}{R3 + R4}\ (K\Omega)$$

#### Where:

 $R_{\text{trim\_up}}$  is the external resistor in  $K\Omega$ 

Vo\_nom is the nominal output voltage

V₀ is the desired output voltage

R1, R2, R3, R4, Vf and Vr are internal to the unit and are defined in Table 1

Table 1 – Trim up and Trim down Resistor Values

	Output	R1	R2	R3	R4	Vr	Vf
Model Number	Voltage (V)	(ΚΩ)	(ΚΩ)	(ΚΩ)	(ΚΩ)	(V)	(V)
CQB60W-110S05	5.0	2.32	2.32	4.75	NC	2.5	NC
CQB60W-110S12	12.0	9.1	2.4	39	6.8	2.5	0.5
CQB60W-110S15	15.0	12	2.4	56	6.8	2.5	0.5
CQB60W-110S24	24.0	20	2.32	100	6.8	2.5	0.5
CQB60W-110S28	28.0	23.7	2.32	120	6.8	2.5	0.5
CQB60W-110S48	48.0	43.2	2.4	240	6.8	2.5	0.5

For example, to trim-up the output voltage of 12V module (CQB60W-110S12) by 5% to 12.6V, R<sub>trim\_up</sub> is calculated as follows:

$$V_o - V_o$$
 nom = 12.6-12=0.6V

R1=9.1K $\Omega$ , R2=2.4K $\Omega$ , R3=39K $\Omega$ , R4=6.8K, V<sub>r</sub>=2.5V, V<sub>f</sub>=0.5V Vo=12.6V, Vo, nom=12V

$$Rtrim\_up = \frac{18.87}{0.6} - 5.79 = 25.66 (K\Omega)$$

#### The typical value of R<sub>trim\_up</sub>

Trim	5V	12V	15V	24V	28V	48V
up (%)			R <sub>trim_u</sub>	<sub>p</sub> (ΚΩ)		
1%	116.0	151.5	158.3	163.0	165.1	174.6
2%	58.0	72.9	76.1	78.3	79.3	84.0
3%	38.7	46.6	48.7	50.1	50.7	53.8
4%	29.0	33.5	35.0	36.0	36.5	38.7
5%	23.2	25.7	26.8	27.5	27.9	29.6
6%	19.3	20.4	21.3	21.9	22.2	23.6
7%	16.6	16.7	17.4	17.8	18.1	19.3
8%	14.5	13.9	14.5	14.8	15.0	16.0
9%	12.9	11.7	12.2	12.4	12.6	13.5
10%	11.6	9.9	10.4	10.6	10.7	11.5

#### The value of R<sub>trim\_down</sub> defined as:

$$Rtrim\_down = \frac{R1 \times (Vo - Vr)}{Vo\_nom - Vo} - Rt (K\Omega)$$



#### Where:

 $R_{\text{trim\_down}}$  is the external resistor in  $K\Omega$ 

V<sub>o, nom</sub> is the nominal output voltage

V₀ is the desired output voltage

R1, R2, R3 and Vr are internal to the unit and are defined in Table 1

For example: to trim-down the output voltage of 12V module (CQB60W-110S12) by 5% to 11.4V, R<sub>trim\_down</sub> is calculated as follows:

Vo\_nom-Vo=12-11.4=0.6 V

R1=9.1K $\Omega$ , R3=39K $\Omega$ , V<sub>r</sub>=2.5V

$$Rtrim\_down = \frac{9.1 \times (11.4 - 2.5)}{0.6} - 39 = 95.98 (K\Omega)$$


#### The typical value of R<sub>trim down</sub>

Trim	5V	12V	15V	24V	28V	48V
down (%)			R <sub>trim_do</sub>	<sub>wn</sub> (KΩ)		
1%	108.9	672.3	932	1671.7	2014.7	3811.8
2%	50.9	312.1	432	775.8	935.5	1764.3
3%	31.6	192.0	265.3	477.2	575.8	1081.8
4%	21.9	132.0	182.0	327.9	395.9	740.5
5%	16.1	96.0	132.0	238.3	288.0	535.8
6%	12.3	72.0	98.7	178.6	216.0	399.3
7%	9.5	54.8	74.9	136.0	164.6	301.8
8%	7.4	42.0	57.0	104.0	126.1	228.7
9%	5.8	31.9	43.1	79.1	96.1	171.8
10%	4.5	23.9	32.0	59.2	72.1	126.3

### 7. Input / Output Considerations

#### 7.1 Input Capacitance at the Power Module

The converters must be connected to low AC source impedance. To avoid problems with loop stability source inductance should be low. Also, the input capacitors (Cin) should be placed close to the converter input pins to de-couple distribution inductance. However, the external input capacitors are chosen for suitable ripple handling capability. Low ESR capacitors are good choice. Circuit as shown as below represents typical measurement methods for reflected ripple current. C1 and L1 simulate a typical DC source impedance. The input reflected-ripple current is measured by current probe to oscilloscope with a simulated source Inductance (L1).

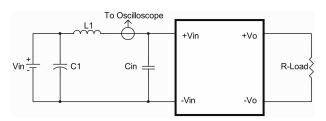


L1: 12uH

C1: 68uF ESR<0.7ohm @100KHz Cin: 68uF ESR<0.7ohm @100KHz

#### 7.2 Hold Up Time

Hold up time is defined as the duration of time that DC/DC converter output will remain active following a loss of input power. To meet power supply interruptions, an external circuit is required, shown below.




D1: 200V/10A R1: 100Ω/10W

C1: 68uF/200V ESR<0.7Ω

C2	24Vin	36Vin	48Vin
	3300uF	1100uF	600uF
Hold up time for 10ms	72Vin	96Vin	110Vin
	250uF	150uF	120uF
	24Vin	36Vin	48Vin
Hold up time for 20mg	9400uF	3300uF	1700uF
Hold up time for 30ms	72Vin	96Vin	110Vin
	730uF	410uF	330uF



#### 7.3 Output Ripple and Noise

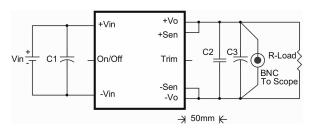


C1: 68uF/200V ESR<0.7Ω
C2: 1uF ceramic capacitor
C3: 10uF tantalum capacitor

Output ripple and noise measured with 10uF tantalum capacitor and 1uF ceramic capacitors across output. A 20 MHz bandwidth oscilloscope is normally used for the measurement.

The conventional ground clip on an oscilloscope probe should never be used in this kind of measurement. This clip, when placed in a field of radiated high frequency energy, acts as an antenna or inductive pickup loop, creating an extraneous voltage that is not part of the output noise of the converter.



Another method is shown in below, in case of coaxial cable/BNC is not available. The noise pickup is eliminated by pressing scope probe ground ring directly against the -V $_{out}$  terminal while the tip contacts the +V $_{out}$  terminal. This makes the shortest possible connection across the output terminals.

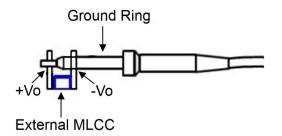


#### 7.4 Output Capacitance

The CQB60W-110S series converters provide unconditional stability with or without external capacitors. For good transient response, low ESR output capacitors should be located close to the point of load (<100mm). PCB design emphasizes low resistance and inductance tracks in consideration of high current applications. Output capacitors with their associated ESR values have an impact on loop stability and bandwidth. Cincon's converters are designed to work with load capacitance to see specifications.

#### 8. Series and Parallel Operation

#### 8.1 Series Operation

Series operation is possible by connecting the outputs two or more units. Connection is shown in below. The output current in series connection should be lower than the lowest rate current in each power module.

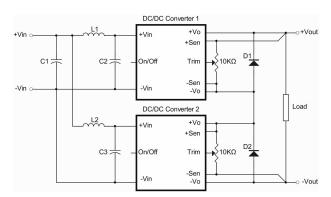

**Simple Series Operation Connect Circuit** 

L1, L2: 1.0uH


C1, C2, C3: 68uF/200V ESR<0.7Ω

#### Note

- If the impedance of input line is high, C1, C2, C3 capacitance must be more than above. Use more than two recommended capacitor above in parallel when ambient temperature becomes lower than -20°C.
- 2. Recommend Schottky diode (D1, D2) be connected across the output of each series connected converter, so that if one converter shuts down for any reason, then the output stage will not be thermally overstressed. Without this external diode, the output stage of the shut-down converter could carry the load current provided by the other series converters, with its MOSFETs conducting through the body diodes. The MOSFETs could then be overstressed and fail. The external diode should be capable of handling the full load current for as long as the application is expected to run with any unit shut down.



Series for ±output operation is possible by connecting the outputs two units, as shown in the schematic below.

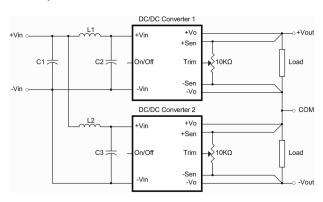

Simple ±Output Operation Connect Circuit

L1, L2: 1.0uH C1, C2, C3: 68uF/200V ESR<0.7Ω

#### Note:


If the impedance of input line is high, C1, C2, C3 capacitance must be more than above. Use more than two recommended capacitor above in parallel when ambient temperature becomes lower than -20°C.

#### 8.2 Parallel Operation

The CQB60W-110S series parallel operation is not possible.

#### 8.3 Redundant Operation

Parallel for redundancy operation is possible by connecting the units as shown in the schematic below. The current of each converter become unbalance by a slight difference of the output voltage. Make sure that the output voltage of units of equal value and the output current from each power supply does not exceed the rate current. Suggest use an external potentiometer to adjust output voltage from each power supply.

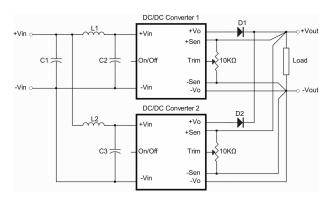

**Simple Redundant Operation Connect Circuit** 

L1, L2: 1.0uH

C1, C2, C3: 68uF/200V ESR<0.7Q

#### Note

If the impedance of input line is high, C1, C2, C3 capacitance must be more than above. Use more than two recommended capacitor above in parallel when ambient temperature becomes lower than -20°C.

#### 9. Thermal Design

#### 9.1 Operating Temperature Range

The CQB60W-110S series converters can be operated within a wide case temperature range of -40°C to 100°C. Consideration must be given to the derating curves when ascertaining maximum power that can be drawn from the converter. The maximum power drawn from open quarter brick models is influenced by usual factors, such as:

- Input voltage range
- Output load current
- Forced air or natural convection
- Heat sink optional

#### 9.2 Convection Requirements for Cooling

To predict the approximate cooling needed for the quarter brick module, refer to the power derating curves in **section 9.4**. These derating curves are approximations of the ambient temperatures and airflows required to keep the power module temperature below its maximum rating. Once the module is assembled in the actual system, the module's temperature should be monitored to ensure it does not exceed 100°C as measured at the center of the top of the case (thus verifying proper cooling).


#### 9.3 Thermal Considerations

The power module operates in a variety of thermal environments; however, sufficient cooling should be provided to help ensure reliable operation of the unit. Heat is removed by conduction, convection, and radiation to the surrounding environment. The example is presented in **section 9.4**. The power output of the module should not be allowed to exceed rated power (Vo\_set X Io\_max.).

#### 9.4 Power Derating

The operating case temperature range of CQB60W-110S series is -40°C to +100°C. When operating the CQB60W-110S series, proper derating or cooling is needed. The maximum case temperature under any operating condition should not exceed 100°C.

The following curve is the de-rating curve of CQB60W-110S series without heat sink.

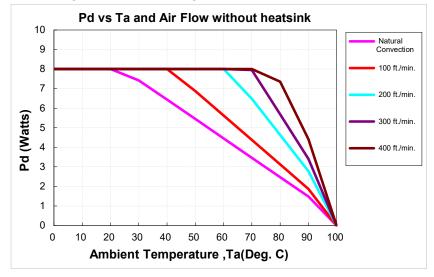

AIR FLOW RATE	TYPICAL R <sub>ca</sub>
Natural Convection 20ft./min. (0.1m/s)	10.1 °C/W
100 ft./min. (0.5m/s)	8.0 °C/W
200 ft./min. (1.0m/s)	5.4 °C/W
300 ft./min. (1.5m/s)	4.4 °C/W
400 ft./min. (2.0m/s)	3.4 °C/W



#### Example:

What is the minimum airflow necessary for a CQB60W-110S05 operating at nominal line voltage, an output current of 12A, and a maximum ambient temperature of 50°C?

Solution:

Given: Vin=110Vdc, Vo=5Vdc, Io=12A

**Determine power dissipation (P<sub>d</sub>):**  $P_d = P_i - P_o = P_o (1-\eta)/\eta$ ,  $P_d = 5 \times 12 \times (1-0.91)/0.91 = 5.93$ Watts

Determine airflow: Given: Pd=5.93W and Ta=50°C


Check power derating curve: Minimum airflow=100 ft./min.

Verify:

Maximum temperature rise is  $\Delta T$ =  $P_d \times R_{ca}$ =5.93×8.0=47.44°C Maximum case temperature is  $T_c$ = $T_a$ + $\Delta T$ =97.44°C<100°C

#### Where:

The  $R_{ca}$  is thermal resistance from case to ambient environment  $T_a$  is ambient temperature and  $T_c$  is case temperature

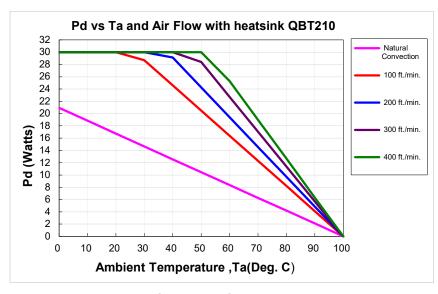

AIR FLOW RATE	TYPICAL R <sub>ca</sub>
Natural Convection 20ft./min. (0.1m/s)	4.78 °C/W
100 ft./min. (0.5m/s)	2.44 °C/W
200 ft./min. (1.0m/s)	2.06 °C/W
300 ft./min. (1.5m/s)	1.76 °C/W
400 ft./min. (2.0m/s)	1.58 °C/W

#### Example with heat sink QBT210 (M-C421):

What is the minimum airflow necessary for a CQB60W-110S12 operating at nominal line voltage, an output current of 5A, and a maximum ambient temperature of 60°C?

Solution:

Given: Vin=110Vdc, Vo=12Vdc, Io=5A

**Determine power dissipation (P<sub>d</sub>):**  $P_d = P_i - P_o = P_o (1-\eta)/\eta$ ,  $P_d = 12.0 \times 5 \times (1-0.92)/0.92 = 5.22 Watts$ 

Determine airflow: Given: P<sub>d</sub>= 5.22W and T<sub>a</sub>=60°C

Check above power de-rating curve: Pd<8.4W, Natural Convection

Verify:

Maximum temperature rise is  $\Delta T$ =  $P_d \times R_{ca}$ =5.22×4.78=24.95°C Maximum case temperature is  $T_c$ = $T_a$ + $\Delta T$ =84.95°C<100°C

#### Where:

The  $R_{ca}$  is thermal resistance from case to ambient environment  $T_a$  is ambient temperature and  $T_c$  is case temperature




#### 9.5 Quarter Brick Heat Sinks

Heat sinks assembly refer to Datasheet-Thermal

#### 10. Safety & EMC

#### 10.1 Input Fusing and Safety Considerations

The CQB60W-110S series converters have no internal fuse. In order to achieve maximum safety and system protection, always use an input line fuse. We recommended a 2A time delay fuse for all models. It is recommended that the circuit have a transient voltage suppressor diode (TVS) across the input terminal to protect the unit against surge or spike voltage and input reverse voltage (as shown).

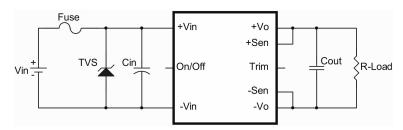

#### 10.2 EMC Considerations

EMI Test standard: EN 55032 Class B/EN50121-3-2:2016 Conducted & Radiated Emission

Test Condition: Input Voltage: 110Vdc, Output Load: Full Load

(1) EMI Meet EN55011/EN55032/EN50121-3-2:2006

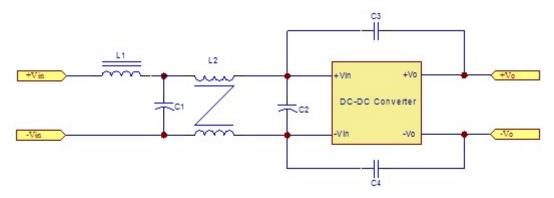


Figure1 Connection Circuit



#### Components value:


	Model number							
DC/DC	110S05	110S12	110S15	110S24	110S28	110S48		
C1	220uF/200V YXF							
C2	220uF/200V YXF							
C3	2200pF MLCC							
C4	2200pF MLCC							
L1	38uH Short							
L2	1mH							

Note:

C1, C2 aluminum capacitors

C3, C4 ceramic capacitors

#### EMI and Conducted Noise Meet EN55022 Class B:

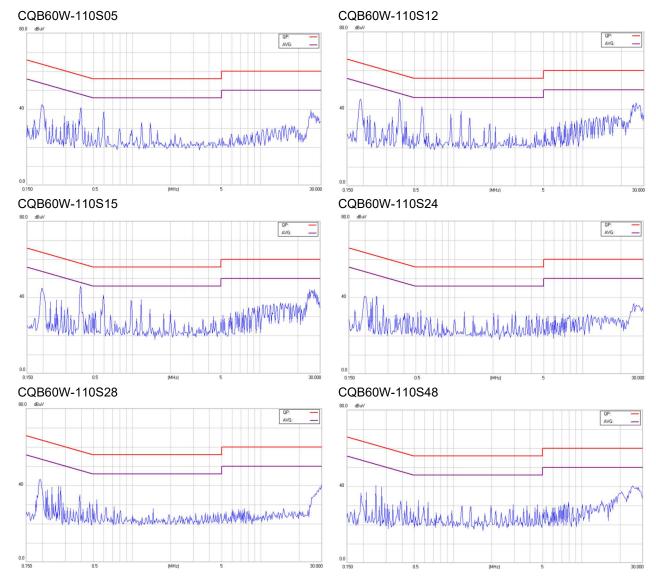



(2) EMI Test standard: EN50121-3-2:2016 (EN55011 Class A Conducted & Radiated Emission) Test Condition: Input Voltage: Nominal, Output Load: Full Load

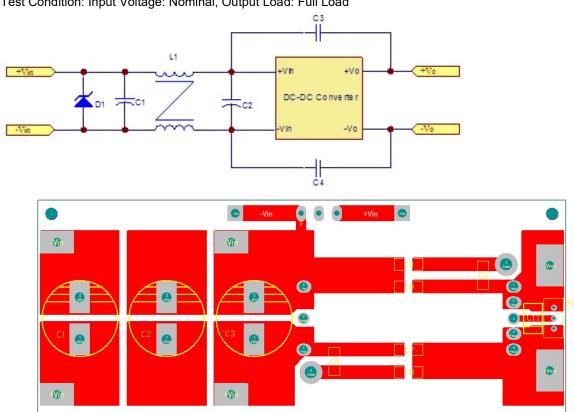


Figure 3 PCB Layout Top View

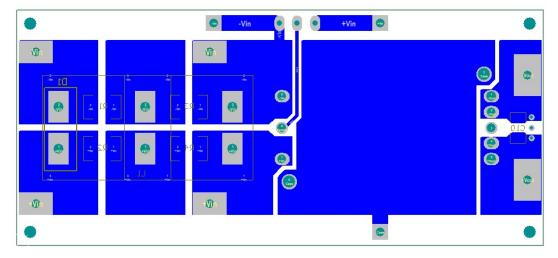


Figure4 PCB Layout Bottom View



#### Components value:

	Model number					
DC/DC	110S05	110S12	110S15	110S24	110S28	110S48
D1	1.5KE180A Littelfuse					
C1	220uF/200V YXF					
C2	220uF/200V YXF					
C3	2200pF MLCC					
C4	2200pF MLCC					
L1	1mH					


Note:

C1, C2 aluminum capacitors


C3, C4 ceramic capacitors

#### EMI and conducted noise meet EN55011 Class A:


#### CQB60W-110S05

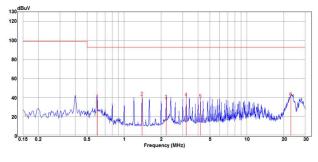


#### CQB60W-110S12

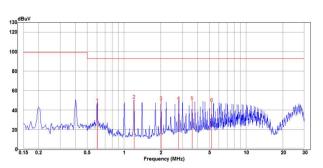


CQB60W-110S15

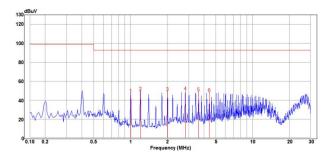


CQB60W-110S24

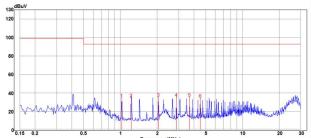



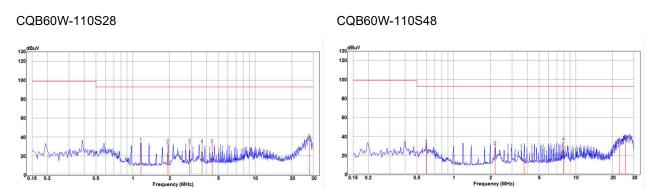

#### 10.3 Suggested Configuration for RIA12 Surge Test

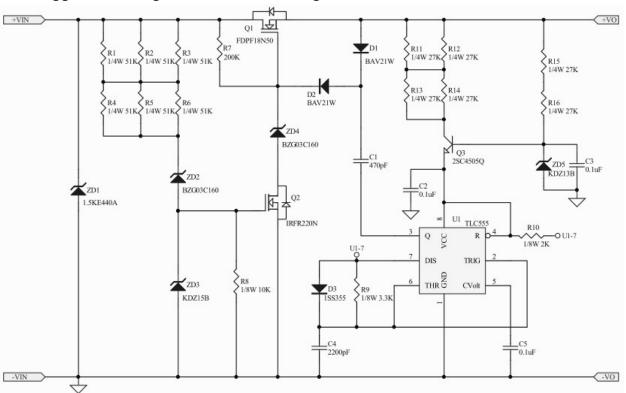

Note: Q1 suggest use FSC FDPF18N50 or equivalent, and provide good heat dissipation conditions

Factory:

#### **CINCON ELECTRONICS CO., LTD.**

### Headquarters:

14F, No.306, Sec.4, Hsin Yi Rd. Taipei, Taiwan

Tel: 886-2-27086210
Fax: 886-2-27029852
E-mail: sales@cincon.com
Web Site: https://www.cincon.com

No. 8-1, Fu Kung Rd. Fu Hsing Industrial Park Fu Hsing Hsiang, ChangHua Hsien, Taiwan

Tel: 886-4-7690261 Fax: 886-4-7698031

#### **Cincon North America:**

1655Mesa Verde Ave. Ste 180

Ventura, CA93003 Tel: 805-639-3350 Fax: 805-639-4101 E-mail: info@cincon.com